

Linkage for Satchwell Valves

MOUNTING INSTRUCTIONS

Linkages components (all the following parts are included in the bag)			Use with valves (models - DN)							
			MVH56FA-MVH46-MVH26				MVH56FC			
			VSF - 15,25 MJF - 20,25 MZ, VZ - 15-50	VSF - 20,32-50 MJF - 15,32-50	VZF MZF 65-100	VZF MZF 125-150	VSF - 15,25 MJF - 20,25 MZ, VZ - 15-50	VSF - 20,32-50 MJF - 15,32-50	VZF MZF 65-100	VZF MZF 125-150
Q	Position	Description								
1	A*	Neck adapter for 1 3/8"	X	X			X	X		
1	B*	Neck adapter for 1 1/4"			X	X			X	X
1	C	Lock nut for 1 3/8"		X				X		
1	F*	Stem adapter for 1/4" (Long, L = 109 mm)	X	X			X	X	X	
1	H*	Stem adapter for 1/4" (Extra-long, L = 120 mm)			X					
1	L*	Stem adapter for 3/8" (Long, L = 70 mm)				X				X
1		M8 Stem nut	X							
1		3/8" Stem nut				X				X
1		1/4" Stem nut	X	X	X		X	X	X	

* Letter stamped on the component.

