


MOUNTING INSTRUCTIONS

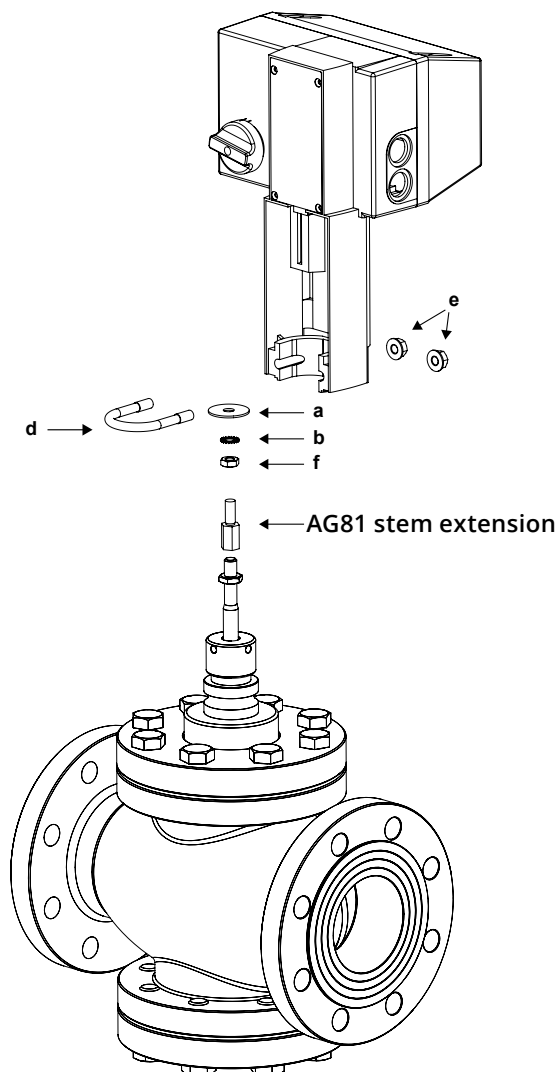

- Remove the first 2 nuts and the aluminum disc from the valve stem;
- screw the stem extension (**AG81**) onto the valve as far as it will go;
- **ATTENTION: don't use the stem extension supplied with MVH;**
- screw nut (**f**), jagged washer (**b**) and the indicator disk (**a**) supplied with the MVH servo control;
- assemble the actuator to the valve according to the mounting instructions (DIM156en).

The performances stated in this sheet can be modified without any prior notice.