


AG52/62

Linkage for MVE and MVH Actuators

MOUNTING INSTRUCTIONS

Model	Description
AG52	Linkage to motorize the iSMA CONTROLLI V.B valves with MVE actuators
AG62	Linkage to motorize the iSMA CONTROLLI V.B valves with MVH actuators

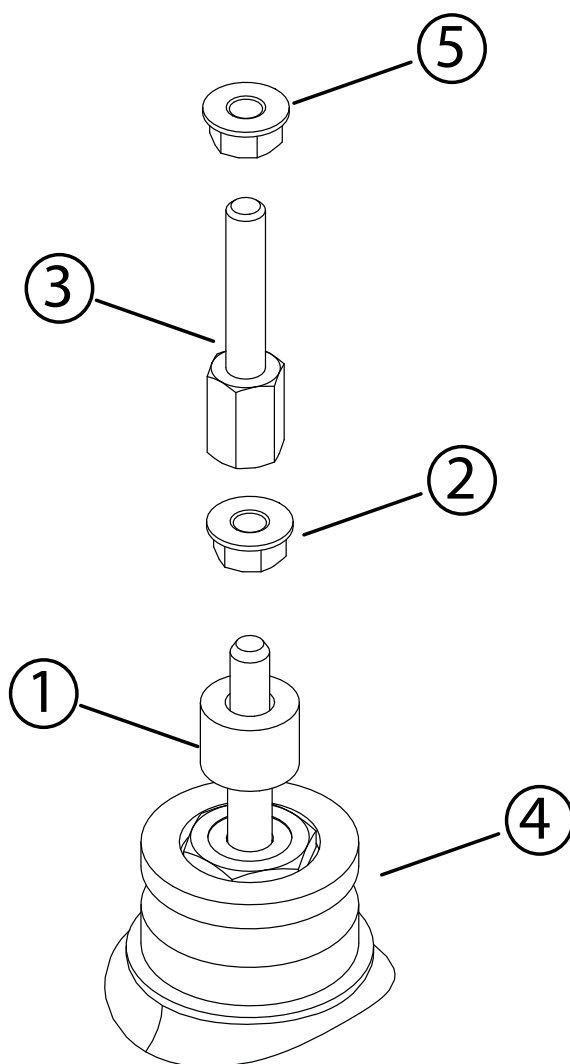

Linkage Mounting

- Unscrew the ring nut on the thread of the valve neck, and remove the stem protection (if present);
- insert the spacer (1) on the valve stem placed with the hollow side downwards;
- screw down completely nut (2) on the valve stem until it reaches the spacer, but without tightening it;
- screw down completely pivot (3) on the valve stem and block it with the nut (2);
- **Note:** the pivot (3) and the nut (5) are not available for AG62; they are supplied with MVH actuator;
- screw joint (4) on the valve neck and make sure it is tightened completely on the thread;
- screw partially nut (5) on the pivot (3).