



Linkage for MVE with Honeywell valves V5011R, V5011S, V5011E, V5013E and V5013R

INSTALLATION

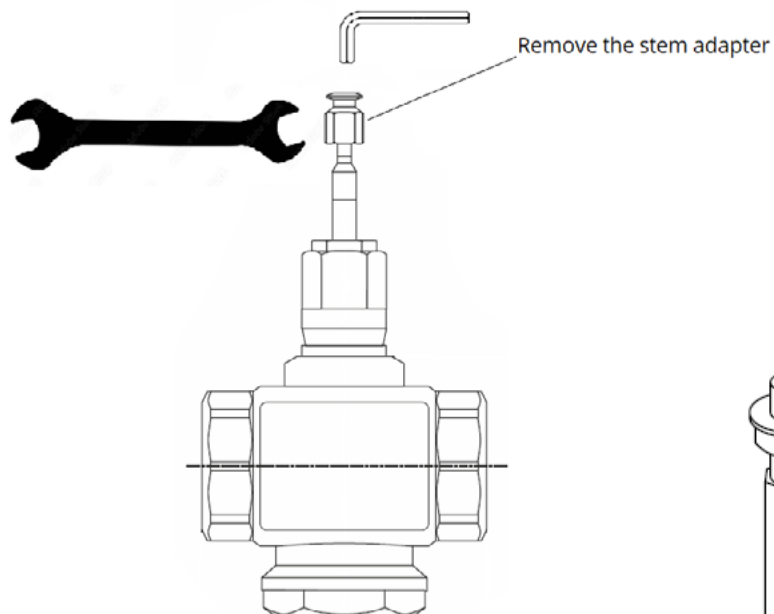

Tools:
hexagonal wrench 3mm
open jaw wrench 8mm
open jaw wrench 10mm
open jaw wrench 13mm
open jaw wrench 14mm

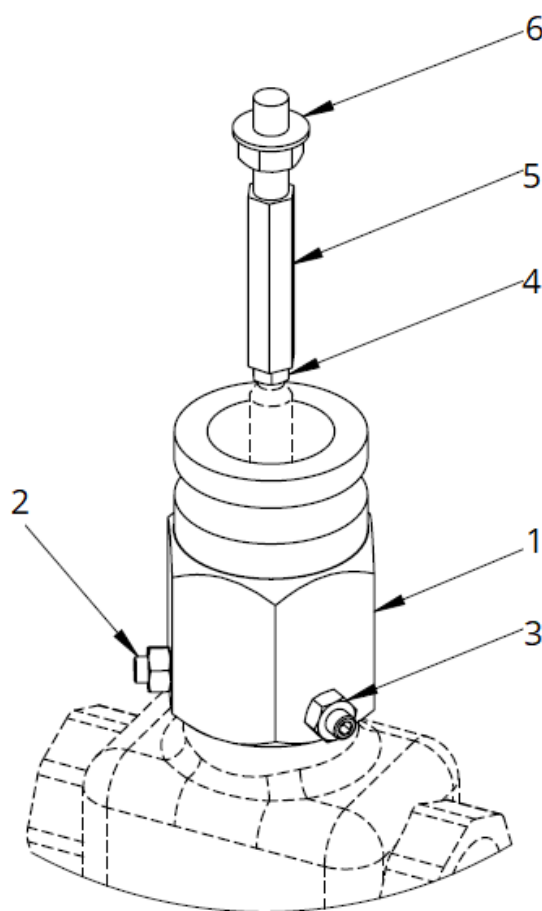

1. Place the adapter (1) on the neck of the valve and tighten the grain (2) by placing it centered with the stem. Tighten the lock nuts (3).
2. Screw the lock nut (4) and the extension (5) onto the valve stem all the way. Tighten the lock nut (4).
3. Assemble the nut (6) on the extension. (5)
4. Assemble the actuator following the mounting instruction.