


Linkage Kit for Wittler Valves/MVE Actuator

MOUNTING INSTRUCTIONS

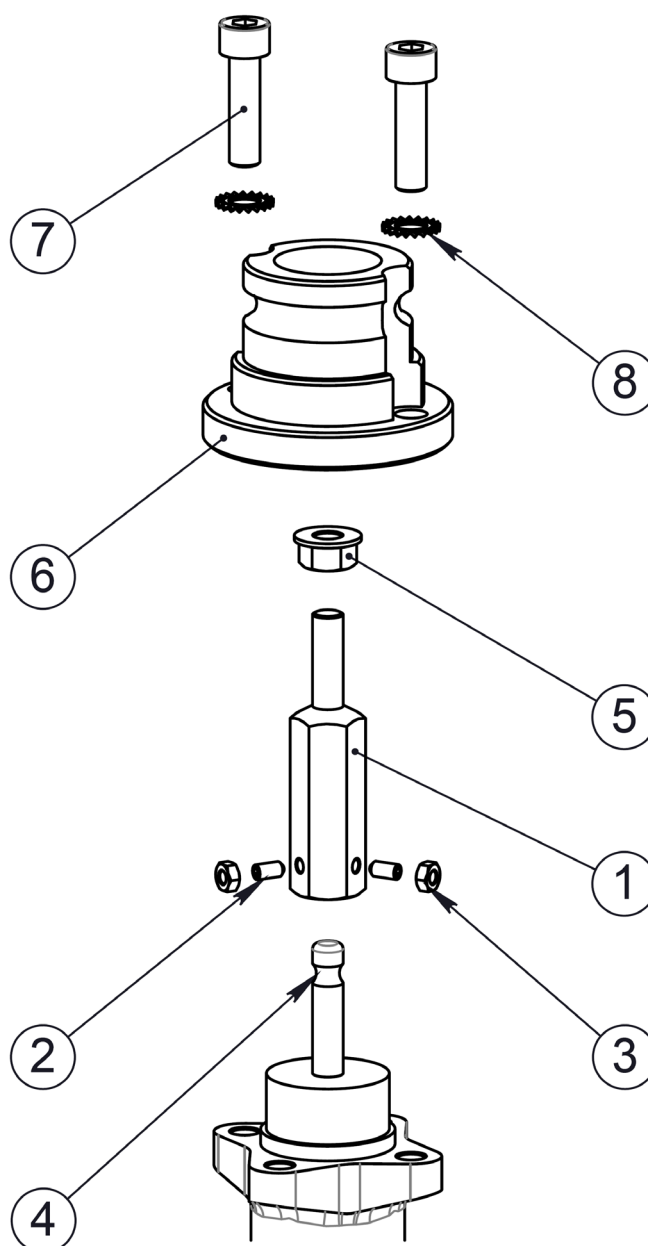

- Mount the extension **(1)** on the valve spindle through the dowels **(2)** and the nuts **(3)**; the dowels **(2)** have to engage on the stem in correspondance to the groove **(4)**;
- screw the nut **(5)** on the extension **(1)**;
- mount the hub **(6)** on the valve bonnet through the screws **(7)** and the indented washers **(8)** (if on the valve neck are presente 4 holes, choose arbitrarily 2 of them);
- the valve can be now coupled with MVH (except for MVH3K models) and MVE actuators following the realting mounting instructions.